

## Ideal for belt-in-oil engines: TOOL BOX V09


TOOL BOX V09 contains the main tools mechanics require for working on the Ford EcoBoost and Ford 2.0l EcoBlue engines or the 1.2l PureTech units from Opel and other Stellantis group brands. These belt-in-oil engines have been fitted millions of times over in Europe. Using TOOL BOX V09, repairs can be carried out in accordance with the manufacturer's specifications easily, safely and efficiently.

### Contents

- > Locking, setting and alignment tools for camshaft
- > Locating pin for flywheel
- > Locking tool for variable camshaft timing
- > Setting, locking and holding tools for crankshaft
- > Installation tool for front cover seal
- > Locking tool for flywheel
- > Mounting device for timing belt
- > Set of locking pins 0.8-2.6 mm, timing belt tensioner and set of sealing plugs

### Benefits

- > High-quality tools for professional use
- > Made of robust, high-grade steel
- > The most common tools for belt-in-oil engines from Stellantis quickly to hand
- > Exclusive set of tools only available from Continental
- > Clearly organized storage in a sturdy case
- > Tools available to order individually in the case of damage or loss
- > Five-year guarantee:  
[www.continental-ep.com/5](http://www.continental-ep.com/5)

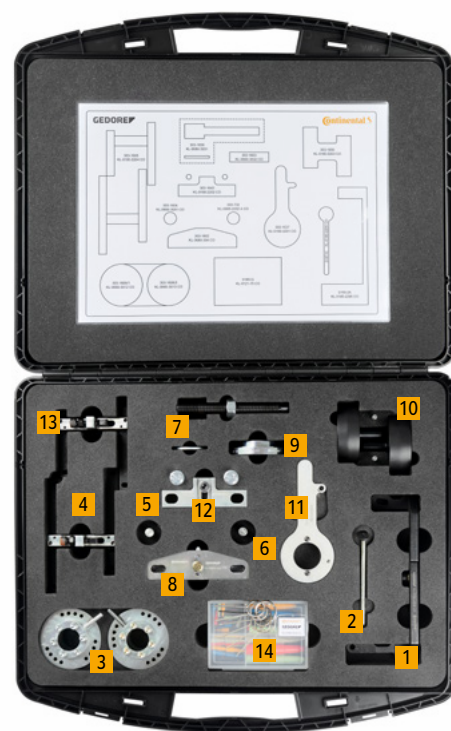

**TIP:** TOOL BOX V10 containing a torque multiplier for some models of Ford EcoBoost engine is a highly recommended add-on for this tool box.



Parts list/area of application TOOL BOX V09

| Item. | Description                        | Peugeot/Citroen/DS                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Displacement | OE tool no.                             |
|-------|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------|
|       |                                    | Engine codes                                                                                                                                                               | K Type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |              |                                         |
| 1     | Camshaft locking and setting tools | EB0; EB0F; EB2; EB2ADT; EB2ADTD; EB2ADTDB; EB2ADTS; EB2ADTX; EB2ADTXM; EB2D; EB2DT; EB2DTM; EB2DTS; EB2DTSD; EB2DTSM; EB2F; EB2FA; EB2FAD; EB2FAM; EB2FB; EB2FD; EB2M; HNY | 132158; 137107; 138514; 119329; 57402; 117342; 136616; 105910; 58663; 121982; 122967; 58664; 146803; 131412; 136596; 136597; 122968; 109326; 135806; 135809; 128135; 136601; 128136; 136619; 128184; 112336; 143390; 144440; 115056; 142176; 108163; 108026; 136631; 105914; 136636; 108027; 129687; 136637; 112367; 119968; 112366; 136660; 131183; 131184; 150706; 132839; 145502; 58578; 58583; 108600; 108598; 109325; 136663; 131198; 118601; 118003; 118008; 118004; 118599; 118598; 133980; 133978; 133979; 144480; 118012; 133326; 106339; 137588; 58874; 130999; 138869; 111916; 111917; 142637; 137587; 33804; 126685; 139298; 136701; 33807; 136632; 144436; 130989; 136530; 107418; 136531; 122065; 142646; 121650; 111987; 58768; 117339; 136611; 59726; 144511; 100834; 144519; 100835; 145072; 105876; 145071; 100644; 148306; 124945; 111986; 141507; 141508; 138902; 136712; 138903; 119202; 130752; 137043; 148182; 148183 | 1.0/1.2      | 0109-2A                                 |
| 2     | Flywheel locating pin              | EB0; EB0F; EB2; EB2ADT; EB2ADTD; EB2ADTDB; EB2ADTS; EB2ADTX; EB2ADTXM; EB2D; EB2DT; EB2DTM; EB2DTS; EB2DTSD; EB2DTSM; EB2F; EB2FA; EB2FAD; EB2FAM; EB2FB; EB2FD; EB2M; HNY | 132158; 137107; 138514; 119329; 57402; 117342; 136616; 105910; 58663; 121982; 122967; 58664; 146803; 131412; 136596; 136597; 122968; 109326; 135806; 135809; 128135; 136601; 128136; 136619; 128184; 112336; 143390; 144440; 115056; 142176; 108163; 108026; 136631; 105914; 136636; 108027; 129687; 136637; 112367; 119968; 112366; 136660; 131183; 131184; 150706; 132839; 145502; 58578; 58583; 108600; 108598; 109325; 136663; 131198; 118601; 118003; 118008; 118004; 118599; 118598; 133980; 133978; 133979; 144480; 118012; 133326; 106339; 137588; 58874; 130999; 138869; 111916; 111917; 142637; 137587; 33804; 126685; 139298; 136701; 33807; 136632; 144436; 130989; 136530; 107418; 136531; 122065; 142646; 121650; 111987; 58768; 117339; 136611; 59726; 144511; 100834; 144519; 100835; 145072; 105876; 145071; 100644; 148306; 124945; 111986; 141507; 141508; 138902; 136712; 138903; 119202; 130752; 137043; 148182; 148183 | 1.0/1.2      | 0197-N                                  |
| 14    | Set of sealing plugs               | EB0; EB0F; EB2; EB2ADT; EB2ADTD; EB2ADTDB; EB2ADTS; EB2ADTX; EB2ADTXM; EB2D; EB2DT; EB2DTM; EB2DTS; EB2DTSD; EB2DTSM; EB2F; EB2FA; EB2FAD; EB2FAM; EB2FB; EB2FD; EB2M; HNY | 132158; 137107; 138514; 119329; 57402; 117342; 136616; 105910; 58663; 121982; 122967; 58664; 146803; 131412; 136596; 136597; 122968; 109326; 135806; 135809; 128135; 136601; 128136; 136619; 128184; 112336; 143390; 144440; 115056; 142176; 108163; 108026; 136631; 105914; 136636; 108027; 129687; 136637; 112367; 119968; 112366; 136660; 131183; 131184; 150706; 132839; 145502; 58578; 58583; 108600; 108598; 109325; 136663; 131198; 118601; 118003; 118008; 118004; 118599; 118598; 133980; 133978; 133979; 144480; 118012; 133326; 106339; 137588; 58874; 130999; 138869; 111916; 111917; 142637; 137587; 33804; 126685; 139298; 136701; 33807; 136632; 144436; 130989; 136530; 107418; 136531; 122065; 142646; 121650; 111987; 58768; 117339; 136611; 59726; 144511; 100834; 144519; 100835; 145072; 105876; 145071; 100644; 148306; 124945; 111986; 141507; 141508; 138902; 136712; 138903; 119202; 130752; 137043; 148182; 148183 | 1.0/1.2      | 0188-T;<br>0189-Q;<br>0194-T;<br>1617-J |



# Parts list/area of application TOOL BOX V09

| Item | Description                                           | Ford                                                                                                                                                                                                                                                                                     | Displacement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | OE tool no. |          |
|------|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|----------|
|      |                                                       | Engine codes                                                                                                                                                                                                                                                                             | K Type                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |             |          |
| 3    | Locking tool, variable camshaft timing                | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1606 |
| 4    | Alignment tool, camshaft                              | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1605 |
| 5    | Setting tool, crankshaft                              | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-732  |
| 6    | Locking tool, crankshaft                              | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1604 |
| 7    | Installation tool, front cover seal                   | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1636 |
| 8    | Locking tool, flywheel                                | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1602 |
| 9    | Installation tool, front cover seal                   | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0         | 303-1603 |
| 10   | Mounting device, timing belt                          | BCCA; BCCB; BCCC; BCFB; BCRA; BCRB; BJFA; BJFB; BJRA; BKFA; BKFB; BKHA; BKRA; BLFA; BLFB; BLHA; BLRA; YLCA; YLCB; YLCC; YLDA; YLDC; YLF6; YLFA; YLFB; YLFS; YLR6; YLRA; YMCA; YMCB; YMCC; YMDA; YMF6; YMFA; YMFB; YMFS; YMHA; YMR6; YMRA; YNCA; YNF6; YNFA; YNFB; YNFS; YNHA; YNR6; YNRA | 118533; 118534; 118535; 118536; 118537; 118538; 118539; 118540; 118541; 119467; 119468; 119470; 119471; 119472; 119473; 119475; 119476; 119477; 119478; 119479; 119480; 119481; 119482; 119483; 123031; 123032; 123043; 123044; 131284; 131651; 132803; 132804; 132805; 132828; 132829; 132830; 132832; 132833; 132834; 132835; 132836; 132837; 133002; 133004; 133875; 135369; 135370; 135371; 135373; 135374; 135375; 136633; 136634; 137134; 137136; 138181; 138182; 138215; 138216; 138672; 139643; 139644; 140505; 144146; 148379 | 2.0         | 303-1650 |
| 11   | Holding tool, crankshaft                              | BCCA; BCCB; BCCC; BCFB; BCRA; BCRB; BJFA; BJFB; BJRA; BKFA; BKFB; BKHA; BKRA; BLFA; BLFB; BLHA; BLRA; YLCA; YLCB; YLCC; YLDA; YLDC; YLF6; YLFA; YLFB; YLFS; YLR6; YLRA; YMCA; YMCB; YMCC; YMDA; YMF6; YMFA; YMFB; YMFS; YMHA; YMR6; YMRA; YNCA; YNF6; YNFA; YNFB; YNFS; YNHA; YNR6; YNRA | 118533; 118534; 118535; 118536; 118537; 118538; 118539; 118540; 118541; 119467; 119468; 119470; 119471; 119472; 119473; 119475; 119476; 119477; 119478; 119479; 119480; 119481; 119482; 119483; 123031; 123032; 123043; 123044; 131284; 131651; 132803; 132804; 132805; 132828; 132829; 132830; 132832; 132833; 132834; 132835; 132836; 132837; 133002; 133004; 133875; 135369; 135370; 135371; 135373; 135374; 135375; 136633; 136634; 137134; 137136; 138181; 138182; 138215; 138216; 138672; 139643; 139644; 140505; 144146; 148379 | 2.0         | 303-1637 |
| 12   | Locking tool, flywheel                                | BCCA; BCCB; BCCC; BCFB; BCRA; BCRB; BJFA; BJFB; BJRA; BKFA; BKFB; BKHA; BKRA; BLFA; BLFB; BLHA; BLRA; YLCA; YLCB; YLCC; YLDA; YLDC; YLF6; YLFA; YLFB; YLFS; YLR6; YLRA; YMCA; YMCB; YMCC; YMDA; YMF6; YMFA; YMFB; YMFS; YMHA; YMR6; YMRA; YNCA; YNF6; YNFA; YNFB; YNFS; YNHA; YNR6; YNRA | 118533; 118534; 118535; 118536; 118537; 118538; 118539; 118540; 118541; 119467; 119468; 119470; 119471; 119472; 119473; 119475; 119476; 119477; 119478; 119479; 119480; 119481; 119482; 119483; 123031; 123032; 123043; 123044; 131284; 131651; 132803; 132804; 132805; 132828; 132829; 132830; 132832; 132833; 132834; 132835; 132836; 132837; 133002; 133004; 133875; 135369; 135370; 135371; 135373; 135374; 135375; 136633; 136634; 137134; 137136; 138181; 138182; 138215; 138216; 138672; 139643; 139644; 140505; 144146; 148379 | 2.0         | 303-1643 |
| 13   | Set of locking pins 0.8-2.6 mm, timing belt tensioner | M1CA; M1CB; M1DA; M1DC; M1DD; M1DH; M1JA; M1JC; M1JE; M1JH; M1JJ; M1JL; M1JM; M2DA; M2DB; M2DC; SFCA; SFCB; SFCC; SFCD; SFCE; SFCF; SFDA; SFDB; SFJA; SFJB; SFJC; SFJD; SFJE; SFJF; SFJJ; SFJK; SFJL; SFJN; SFJP; YYJA; YYJB; YYJC; YYJD; YYJE; YYJF                                     | 118618; 55105; 108797; 142732; 55106; 59492; 108800; 108790; 56757; 56760; 108791; 118620; 131656; 38703; 106349; 58967; 58968; 108811; 136547; 108813; 136546; 108808; 131963; 129172; 129171; 121236; 29567; 31094; 121237; 29566; 31095; 129170; 30438; 113328; 113330; 30487; 108777; 56758; 108778; 56761; 124773; 111088; 111103; 101091; 101058; 101057                                                                                                                                                                         | 1.0/2.0     | 303-1054 |

